

# Panasonic

**Operating Instructions  
Digital Cellular Telephone**

**EB-GD30  
Main Kit**



*Before operating this equipment please read these instructions completely.*



# Contents

<b>Introduction . . . . .</b>	<b>1</b>
Symbols Used . . . . .	1
Using This Manual. . . . .	1
<b>Safety . . . . .</b>	<b>3</b>
<b>Getting Started . . . . .</b>	<b>4</b>
Fitting/Removing the SIM . . . . .	4
Fitting/Removing the Battery . . . . .	5
Charging the Battery . . . . .	6
Low Battery Warning . . . . .	6
Location of Controls . . . . .	7
Display. . . . .	8
<b>Basic Operation . . . . .</b>	<b>9</b>
Power On/Off . . . . .	9
Making a Call . . . . .	9
Automatic Redial . . . . .	10
Ending a Call. . . . .	10
Answering a Call . . . . .	10
Volume Control. . . . .	11
Vibration Alert . . . . .	12
Key Guard . . . . .	12
Phone Clock . . . . .	13
<b>Phone Security . . . . .</b>	<b>16</b>
Phone Lock . . . . .	16
PIN . . . . .	17
Changing Security Codes . . . . .	17
<b>Advanced Operation . . . . .</b>	<b>18</b>
DTMF Tones . . . . .	18
Alert Profile. . . . .	18
Call Hold and Call Waiting . . . . .	19
Call Transfer . . . . .	20
Multi-party Calls . . . . .	20
<b>Phonebook Basics . . . . .</b>	<b>22</b>
Storing a Number . . . . .	22
Browsing Phonebooks by Name or Location . . . . .	23

Retrieving a Number . . . . .	23
Editing Phonebook Entries . . . . .	24
Hot Key Phone Numbers. . . . .	24
<b>Advanced Phonebook . . . . .</b>	<b>25</b>
Note Pad . . . . .	25
Recent Numbers . . . . .	25
Fixed Dial . . . . .	26
Service Dial . . . . .	27
<b>Short Text Messages . . . . .</b>	<b>28</b>
Setting your Phone for Short Text Messages . . . . .	28
Sending a Short Text Message . . . . .	29
Using Pre-Defined Messages . . . . .	29
Receiving Short Text Messages . . . . .	30
Cell Broadcasts . . . . .	31
<b>Alpha Entry . . . . .</b>	<b>32</b>
<b>Menu Structures. . . . .</b>	<b>33</b>
Key Guard . . . . .	33
Phonebook . . . . .	33
Messages . . . . .	34
Applications . . . . .	35
Personalise. . . . .	35
Call Service . . . . .	36
Call Divert . . . . .	37
Security . . . . .	38
Network . . . . .	38
<b>Care and Maintenance . . . . .</b>	<b>40</b>
<b>Glossary of Terms . . . . .</b>	<b>41</b>
<b>Trouble Shooting . . . . .</b>	<b>43</b>
<b>Important Error Messages . . . . .</b>	<b>46</b>
<b>Specifications . . . . .</b>	<b>47</b>
<b>Notes. . . . .</b>	<b>48</b>

# Introduction

Thank you for purchasing this Panasonic GD30 digital cellular phone. This phone is designed to operate on the Global System for Mobile Communications (GSM), GSM900 or GSM1800.

These operating instructions detail use of the equipment contained in the Main Kit.

Some services are network dependent or may only be available on a subscription basis. Some functions are SIM dependent. For more information contact your Service Provider.

## Symbols Used



Shows that you should press the following key(s).

➤Text< Shows that the display text will be flashing.



Shows that the information is a Quick Tip.

## Using This Manual

This manual is designed in sections to guide you through the many functions of this phone. Listed below is a brief outline of each section, to help you find the information you need.

**Getting Started:** Details how to fit the battery, insert the SIM card, introduces the controls and display of the phone.

**Basic Operation:** Details how to make and receive calls, change the phone volume, use Vibration Alert and Key Guard the Clock/Alarm.

**Phone Security:** Details how to use the Phone Lock and PIN Security features as well as how to change security codes.

**Advanced Operation:** Details how to send DTMF tones, create Alert Profiles, use Call Waiting, Call Transfer and Multi-party.

**Phonebook Basics:** Details how to create, store, retrieve, and browse a number in a Phonebook as well as the more advanced Phonebook features.

**Advanced Phonebook:** Details the operation of the Note Pad, Recent Number recall and limiting the numbers available using Fixed Dialling.

## Introduction

**Short Text Messages:** Details how to set up your phone to receive and send Short Text Messages and to receive Cell Broadcasts.

**Alpha Entry:** Details how to access alternative characters with the keypad.

**Menu Structures:** Details the features that can be accessed from the phone menu.

The remaining sections details how to take care of your phone, lists terms used in this manual, a Troubleshooting and Error Message section and the Specifications.

## Safety



This equipment is intended for use when supplied with power from the built-in charger or Dual Charger (EB-CRD30) through the AC Adaptor (EB-CAD70xx/EB-CAD70Vxx)\*. Other usage will invalidate any approval given to this apparatus and may be dangerous. The use of approved accessories is recommended to ensure optimum performance and avoid damage to your phone.



Switch off your cellular phone when in an aircraft. The use of cellular phones in an aircraft may be dangerous to the operation of the aircraft, disrupt the cellular network and may be illegal. Failure to observe this instruction may lead to the suspension or denial of cellular phone services to the offender, or legal action or both.



You are advised not to use the equipment at a refueling point. You are reminded of the need to observe restrictions on the use of radio equipment in fuel depots, chemical plants or where blasting operations are in progress. Never expose the battery pack to extreme temperatures (in excess of 60°C) or charge the battery pack for much longer than recommended.



You **MUST** exercise proper control of your vehicle at all times. Do not use a hand held phone or microphone while you are driving. Find a safe place to stop first. Do not speak into a hands free microphone if it will take your mind off the road. Acquaint yourself thoroughly with restrictions concerning the use of cellular phones within the country you are driving and observe them at all times.



Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.


\* Where xx identifies the specific AC Adaptor region, eg CN, EU, HK, TW, UK.

# Getting Started

## Fitting/Removing the SIM

The SIM is fitted into a holder at the back of the phone underneath the battery.

### *Fitting the SIM*

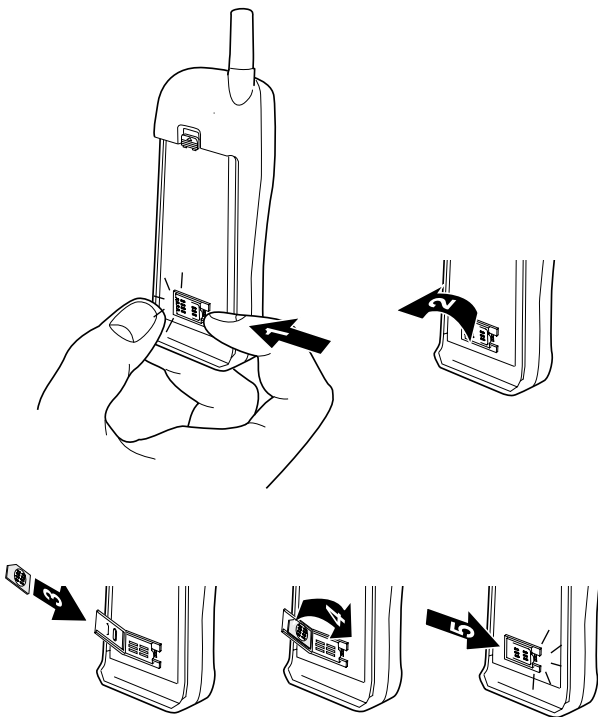

### *Removing the SIM*


To remove the SIM follow the above steps in reverse.




## Fitting/Removing the Battery

Fit a fully charged battery pack. If the battery pack is not fully charged then it must be charged as shown in “Charging the Battery”.

### *Fitting the Battery*

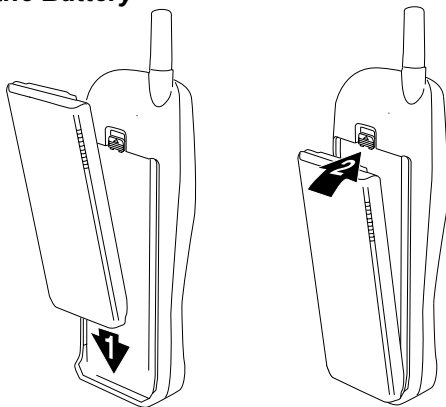

### *Removing the Battery*

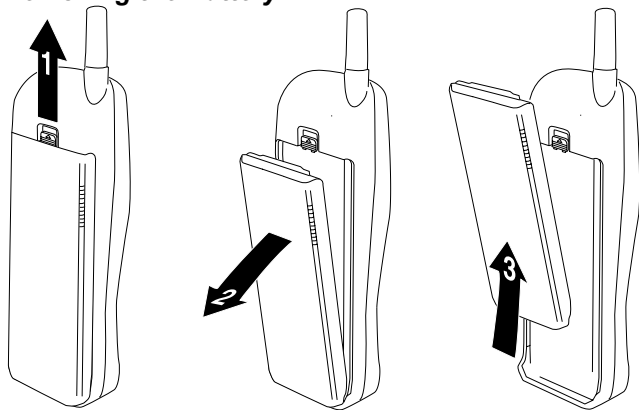

### Charging the Battery


The battery pack must be attached to the phone before the AC Adaptor.

**DO NOT** force the connector as this may damage the phone and/or the AC Adaptor.

When charging is complete remove the AC Adaptor.

**NOTE:** If the Battery Pack is deeply discharged, the phone may take some time to detect which type of Battery Pack it is charging. During this period leave the phone connected to the charger until the charge LED and Battery Level Indicator appears and charging is complete.

To maintain maximum performance of Ni-MH Battery Packs always use until the Low Battery Warning and then fully recharge.

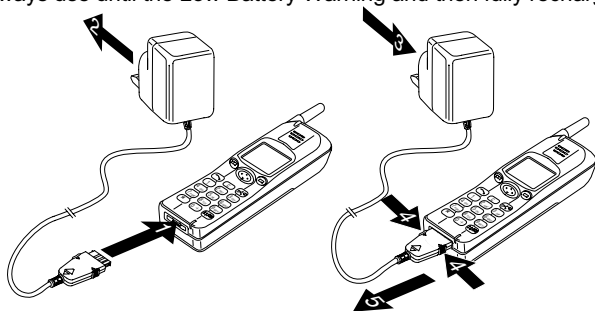


### Operation of Battery Level Indicator


	While charging	Charging complete
Telephone on		
Telephone off		Indicator off

### Low Battery Warning

When the battery power is low a warning tone will sound and a LOW BATTERY message will flash. The power will automatically shut off shortly after the warning tone. Fully charge the battery pack or replace it with a fully charged one. During conversation finish your call immediately.

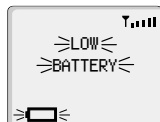

## Location of Controls

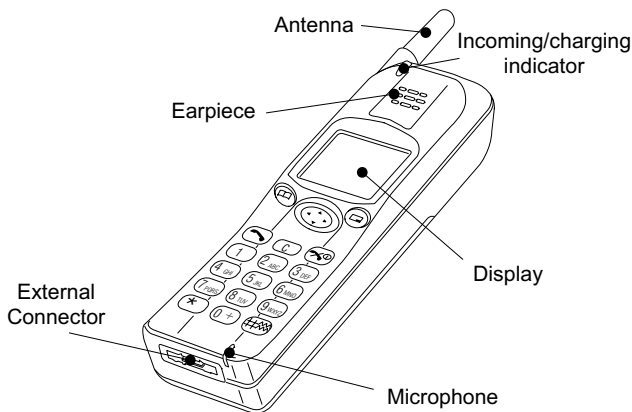

**Navigation key** – pressing up/down scrolls through options in the main area of the display or adjusts the volume. Pressing left/right scrolls through options in the option area of the display



**Select key** – selects an option in the option area of the display



accesses **Phonebook** or **switches character types**



**makes a call** or recalls recently dialled phone numbers




**clears** the last digit entered, clears all digits when pressed and held or returns to the previous display



**ends** a call or **switches the phone on/off** when pressed and held


**Digit keys** 0 to 9, \* and # – the # key will switch on and off vibration alert

# Display

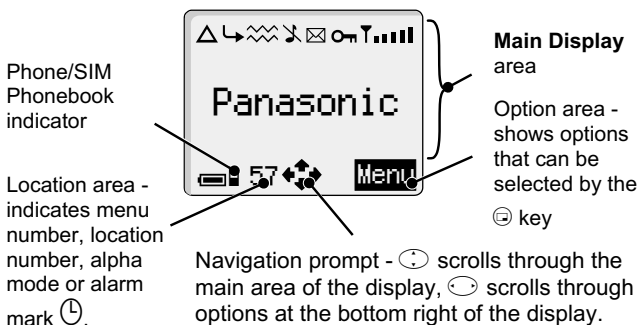


Following some operations the display will automatically clear after three seconds or after pressing any key.

 lights when you are registered to a non-home network - **roaming**

 lights when **call divert** is enabled


 lights when **vibration alert** is enabled


 lights when **all tones or ring volume is off**

 flashes when an **unread message** is stored or lights when **message area is full**

 lights when **phone lock** is enabled

 indicates that it is **possible to make emergency calls**

 indicates the received **signal strength** - weak signal, strong signal

 indicates the **battery level** - full, low battery

 indicates that the source of the currently selected number is the **Mobile Phonebook**

 indicates that the source of the currently selected number is the **SIM Phonebook**

 displayed in the Location area indicates **alarm** is set

 indicates that the **Navigation key** can be pressed

# Basic Operation

## Power On/Off

To turn the phone on or off.




and hold to switch power on

A greeting will be displayed.




and hold to switch power off

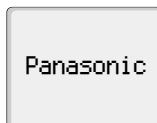


## Making a Call

Make sure that the phone is switched on and the signal strength meter is displayed.



1  area code and phone number

2  

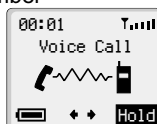




## International Dialling

Using the Automatic International Access Code "+" you will be able to dial international numbers without having to know the code for the international exchange.



1   and hold until a "+" appears

2  country code or  to scroll through the abbreviated international names

3  area code and phone number

4  



**NOTE:** Many countries include an initial "0" in the area code. This should, in most cases, be left out when dialling international numbers. If you have difficulties making international calls, contact your Service Provider.

## Basic Operation

### Emergency Calls

To make an emergency call the antenna symbol (T) must be present.

or press when “SOS” is displayed in the option area of the display

### Automatic Redial

When a call is unsuccessful the phone will ask if you want to redial the phone number again automatically.



when “OK” is displayed in the option area

Auto Redial will countdown the display to the next redial.

To stop redialling, press when “Cancel” is displayed in the option area



If a call is repeatedly unsuccessful you will not be able to automatically redial the phone number. In this case you must redial the phone number manually.

### Ending a Call

### Answering a Call

To receive a call the phone must be switched on and the signal strength meter must be displayed.



any key except or

to reject the call

If a call is not answered the number of unanswered calls will be displayed.

any key to clear the display



## Caller Identification

This feature allows you to identify incoming calls and accept or reject them. The caller's phone number, and name if stored in Phonebook, will be displayed.



**NOTE:** Caller Identification may not always be available.





## Volume Control

### Earpiece Volume



Four levels of volume adjustment are available.

During a call:












 


-   to decrease the volume
-   to increase the volume



### Ring and Key Volume

Changing the ring and key volume is done in the same way. If you increase the ring volume above maximum it will set an escalating ring tone. If you turn the ring volume off, the silent indicator icon (🔇) will be displayed.

When "Menu" is displayed in the option area of the display:

- 1   and  to point to "Personalise"
- 2   and  to point to "Tones"
- 3   and  to point to "Ring Volume" or "Key Volume"
- 4  
- 5 Use  to set the volume
- 6  

### Vibration Alert



When vibration alert is switched on the phone will vibrate when a call is received. Switching on vibration alert will silence the ring volume. However, when the ring volume is adjusted after the vibration alert is switched on, the phone will ring and vibrate when a call is received.

During standby:



#M and hold to switch on or off. When switched on, the phone will vibrate briefly



### Key Guard

Key Guard will prevent any keys from being accidentally pressed e.g. when the phone is being carried.

When “Menu” is displayed in the option area of the display:



⏻ three times to enable Key Guard

When a call is received Key Guard will be temporarily disabled, allowing you to press any key to answer the call. Emergency calls can still be made.

### Disabling Key Guard



⏻ twice when “Free” is displayed in the option area of the display.





## Phone Clock


This phone incorporates a clock with date/time, an alarm and a power on/off feature.

### Initially Setting the Clock

When “Menu” is displayed in the option area of the display:



- 1 and to point to “Applications”
- 2 and to point to “Clock Function”
- 3 and to point to “Clock Set”
- 4
- 5 enter the digits for the date in the format day/month/year
- 6
- 7 enter the digits for the time using 24 hour clock
- 8

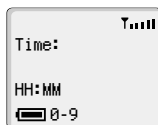

### Setting the Clock Format

- 1 and to point to “Applications”
- 2 and to point to “Clock Function”
- 3 and to point to “Clock Format”
- 4
- 5 to select the format of clock and/or date
- 6



### Setting the Alarm

**NOTE:** If you have not already set the clock, you will be asked to do so prior to setting the alarm.


When “Menu” is displayed in the option area of the display:

- 1 and to point to “Applications”
- 2 and to point to “Clock Function”
- 3 and to point to “Alarm Set”
- 4
- 5 enter the digits for the time
- 6

## Basic Operation

7   to select the frequency of the alarm

8  


Once the alarm has been set,  will be displayed when the phone is in standby mode.



## Muting the Alarm

When the set time is reached the alarm will sound and the display will flash with an alarm message. The alarm will sound for 30 seconds. If the alarm goes off during a call, it will activate vibration alert.

To end the alarm:

 any key

## Disabling the Alarm



To disable the alarm point to “Alarm Set”




1   twice




2   to point to “Disabled”

3  

## Adjusting the Alarm Time

When “Menu” is displayed in the option area of the display:


1   and  to point to “Applications”

2   and  to point to “Clock Function”



3   and  to point to “Alarm Set”

4  

5   four times

6  enter the digits for the time

7  

8   to select the frequency of the alarm

9  

***Setting a Power On/Off Time***

You can set your phone to turn itself on or off automatically at a specified time using the Power On/Off feature. The procedure for setting the Power On/Off automatically is similar to that for setting the Alarm. Adjustment of the Power On/Off Time is also similar to that for the alarm. For either setting or adjusting the time you need to select “Power On Time” or “Power Off Time” in the “Clock Function” menu.

# Phone Security







There are a number of security features for this phone that will protect against unauthorized use, and enable you to restrict access to certain features.


It is recommended that you memorize your security codes. If you need to make a note of your security codes, never write them in a way that they can be recognized by another person. If you forget them contact your dealer for the Phone Lock Code or your Service Provider for PIN and PIN2.

## Phone Lock

With the Phone Lock enabled you will be restricted to answer incoming calls and make emergency calls only. The Phone Lock Code is set to "0000" at the factory.


When "Menu" is displayed in the option area of the display:

- 1   and  to point to "Security"
- 2   twice to enable Phone Lock
- 3 Enter the 4-digit code press 

The phone will be locked and the lock icon () will appear in the display














## Unlocking the Phone

To restore normal operation, enter your Lock Code and press . The lock icon will disappear from the display. However, once you turn the phone off and on again you will be asked to enter the Lock Code again.

## Disabling Phone Lock

When "Menu" is displayed in the option area of the display:

- 1   and  to point to "Security"
- 2   and  to point to "Phone Lock"
- 3   until "Disable" appears in the option area of the display
- 4  
- 5 Enter the Lock Code and press 











## PIN

The PIN (Personal Identification Number) protects your SIM card against unauthorized use. If you enable the PIN, every time the phone is turned on you will be asked to enter the PIN. Once this has been correctly entered you will be able to use the phone. As with the Phone Lock you can change the PIN at any time.

PIN2 controls security for the Fixed Dial Store and Call Charge metering.















 

### ***Enabling/Disabling the PIN***

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Security”
- 2   and  to point to “PIN”
- 3   to enable/disable the PIN
- 4  PIN number 

## Changing Security Codes

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Security”
- 2   and  to point to “Phone Lock” or “PIN”
- 3   until “Change” appears in the option area of the display
- 4   enter the current code
- 5   enter the new code
- 6   verify the new code
- 7  



# Advanced Operation

## DTMF Tones

DTMF tones can be sent during conversation. These are often used to access voice mail, paging and computerized home banking. For example, you may need to input a number to remotely access voice mail messages.

### Send DTMF Tones During a Call



digits (0 to 9, # and \*)

### Pause Dial

Using pauses allows you to send DTMF tones automatically.



- 1 phone number
- 2 0 and hold until a "P" appears
- 3 DTMF digits after the pause e.g. Enter the number to access voice mail messages.



- 4

When the call is successful DTMF tones will be sent every 3 seconds or when is pressed.

## Alert Profile

Alert Profile enables you to identify up to five callers with a particular ring tone making it easier to distinguish between callers.

### Creating an Alert Profile

When "Menu" is displayed in the option area of the display:

- 1 and to point to "Phonebook"
- 2 and to point to "Alert Profile"
- 3 when "Select" is displayed
- 4 when "Insert" is displayed

- 5 enter the phone number or recall from the Phonebook – see “Retrieving a Number” page 23
- 6
- 7 and use to select the ring tone that you wish to use for incoming calls from this phone number
- 8



## Call Hold and Call Waiting

### *Holding/Resuming a Call*

- 1 when “Hold” is displayed in the option area
- 2 when “Resume” is displayed in the option area

### *Making a Second Call*

- 1 phone number, or recall from Phonebook – see “Retrieving a Number” page 23
- 2

The first call will be placed on hold.

### *Receiving a Second Call*

A second call can be received, if call waiting is switched on – see “Call Service” page 36. It is not possible to have more than one fax or data call. All voice calls must be ended before you can make or receive a fax or data call.

### *Accept a Second Call*



- 1 when “Accept” is displayed in the option area

The current call will be placed on hold.

### *Reject a Second Call*



- 1 to display “Reject” in the option area
- 2

### *End Current Call and Receive Second Call*



- 1 with a waiting call
- 2 any key except or

### Operation During Two Calls

#### Swapping Between Calls

  when “Swap” is displayed in the option area

#### End Current Call

1   to display “End” in the option area

2  

The held call will remain held.

#### End Both Calls

### Call Transfer

With two calls connected, Call Transfer enables you to connect them together ending your connection, leaving them to talk together without you.

When you have two calls:

1   to display “Trans.” in the option area

2  

The two calls will be connected to each other and your call will be ended.

**NOTE:** Two call transfer cannot be utilized while in Multi-party mode.

### Multi-party Calls

A Multi-party call enables three to five people to be in conversation at the same time. It is possible to swap between a Multi-party call and another call in the same way as with two separate calls.


#### Enabling Multi-party

With two calls connected (one active, one on hold)

1   to display “Merge” in the option area

2  

A Multi-party call has been enabled, all three people will be able to talk to each other.

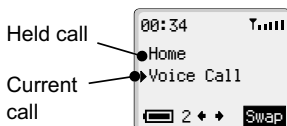



## Adding to Multi-party











You can add to the Multi-party call (up to a maximum of five). Either by making a call or accepting an incoming call. The call can then be merged into the Multi-party.

**NOTE:** When making a call or accepting an incoming call the Multi-party call will be placed on hold. The callers in the Multi-party call can continue to communicate with each other while on hold.

## Splitting a Multi-party

You can select an individual from the Multi-party and remove their connection. This enables you to talk privately without the participation of the rest of the Multi-party.

During a Multi-party call:

- 1   to display "Option" in the option area
- 2  
- 3   to select a caller in the Multi-party
- 4   to display "Split" in the option area
- 5  









The selected caller will be split from the Multi-party call and the Multi-party call will be placed on hold (the remaining Multi-party call callers can still communicate).

## Ending Multi-party Calls

You can either select an individual in the Multi-party and end the call or end the entire Multi-party call.



### Ending a Single Connection

During a Multi-party call

- 1   to display "Option" in the option area
- 2   to select a caller in the Multi-party
- 3   to display "End" in the option area
- 4  

### Ending a Multi-party Call

During a Multi-party call:

-   to end all the calls at once

# Phonebook Basics

Phone numbers can be stored in two locations. You can store numbers in the SIM Phonebook (therefore the number of locations, length of name and number of phone numbers are SIM dependant). Alternatively you can store phone numbers in the Mobile Phonebook, this means that if you change the SIM the numbers in the phone are not lost.

## Storing a Number




- 1 phone number
- 2
- 3 select the Phonebook (either SIM or Mobile)
- 4
- 5 The phone number you entered will be displayed, edit the number if necessary
- 6 to enter the phone number
- 7 enter the name – see “Alpha Entry” page 32
- 8
- 9 location number
- 10

## Automatic Location

The phone number can be stored automatically at the first available location. This can be done instead of entering a location number.

when “Any” is displayed in the option area of the display

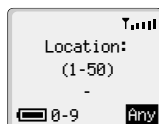


## Overwrite Protection

If a location is occupied you will be asked if you wish to overwrite the current information.

to overwrite the selected location

to choose another location number

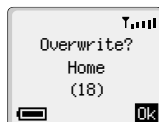


## Browsing Phonebooks by Name or Location

You can search the phonebook by either Name or Location. The default setting for browsing is “Names”. All Phonebook entries will be listed in alphabetical order of both SIM and Mobile Phonebook merged. When browsing by name pressing a lettered key will take you to the first entry starting with that letter.

When “Menu” is displayed in the option area of the display:

- 1 and to point to “Phonebook”
- 2 and to point to “Browse”
- 3 to toggle between “Names” and “Loc’ns”
- 4
- 5 to select the Phonebook you wish to browse
- 6

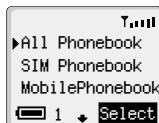

## Retrieving a Number






- 1 When in standby:
- 2
- 3 to browse through the Phonebook

**NOTE:** The Phonebook you last viewed will be the default when you next press . To change the default, use the Phonebook menu to select a particular phonebook.

Once you have selected a phone number or name, there are a number of actions that you can perform. You can dial the selected number by pressing .

# Editing Phonebook Entries

You can View, Recall, Edit, Delete or Create in the Phonebook. To access these features you follow the same procedure. With a phone number or name displayed:

- 1  and scroll between “View”, “Recall”, “Edit”, “Delete” or “Create”
- 2   to select an option

## View

Displays an individual phone number and name or names list.

## Recall

Displays the phone number, enabling you to either change it or call the number.

## Edit

Displays the phone number, allowing you to make changes, followed by the name, enabling you to make changes.






## Delete

Deletes the entry from the Phonebook.

## Create


 
 


Enables you to create a new entry in the Phonebook.

## Speed Dial a Stored Number

- 1  location number – leading zeros may be left out
- 2  
- 3  

# Hot Key Phone Numbers

It is possible to dial phone numbers from the Phonebook or Service Dial part of Phonebook very quickly. Some Hot Key Phone numbers may be reserved by the Service Provider, for example the first three Hot Key Phone numbers may be linked to the Service Dial part of the Phonebook - see page 27. To select a source for the Hot Key phone numbers see “Phonebook” – page 33.

- 1   to  and hold
- 2  


# Advanced Phonebook

## Note Pad

During a call you can enter numbers which you may wish to dial when the call has ended.

During a call:

1  phone number

2 When the call has ended press  to call that number

To store in Phonebook, press  while the number is displayed – see “Storing a Number” page 22.

## Recent Numbers



Recently dialled phone numbers will be stored in “Last Dialed”.

If Caller Identification is available the caller’s phone number for an answered call will be stored in “Answered” and an unanswered call will be stored in “Unanswered”.



When the store is full the next phone number will overwrite the oldest.




1  

2   to point at “Last Dialed”, “Answered” or “Unanswered”

3  

4   to point at the phone number (or name) you wish to dial




5 To store in Phonebook, press  while the number is displayed – see “Storing a Number” page 22.

6  

You can edit or delete the phone number before dialling – see “Editing Phonebook Entries” page 24.




 


## Calling the Last Dialed Number



To redial your last called phone number   

### Returning an Unanswered Call

When the display shows that you have received calls but not answered them.

- 1  
- 2 The last caller's phone number will be displayed if it is available
- 3   to point at the phone number you wish to dial
- 4  

### Fixed Dial


The Fixed Dial Store is part of Phonebook, but with additional security. When the security feature Fixed Dial is switched on it is only possible to make calls with phone numbers that are in the Fixed Dial Store.


 
When Fixed Dial is switched on any manually dialled phone numbers must match a phone number in the Fixed Dial Store.

To store, edit or delete a phone number in the Fixed Dial Store "Fixed Dial" must be switched on – see "Security" page 38. With Fixed Dial switched on, all phone numbers can be added, edited or deleted as normal, but you will be asked for PIN2 – see "Phone Security" page 16.

### "Wild" Numbers



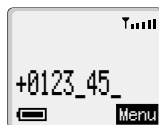

Wild numbers are spaces that can be stored in a phone number. The "wild" numbers must be filled before the phone number is dialled. In this way a call can be restricted to a specific area by storing the area code of a phone and when recalled the remainder can be added. The "wild" numbers can be anywhere within a stored phone number.



- 1   and hold until "\_" appears to enter a wild number
- 2 When the phone number is recalled pressing a numeric key will fill in a "wild" number.

## Service Dial

Your Service Provider may program some special phone numbers into your SIM. It is not possible to modify the Service Dial numbers.

- 1   and hold
- 2   to browse through the Service Dial list of phone numbers

The phone number pointed to can only be recalled or dialled.

# Short Text Messages

You can receive, display, edit and/or send short text messages, of up to 160 characters to mobile phones on the same network or any network that has a roaming agreement.













 
 
 



## Setting your Phone for Short Text Messages

Before you can send a message you must enter the Message Centre number into Parameters (your Service Provider will supply the Message Centre number).

**NOTE:** The Message Centre number may have been preprogrammed, on your SIM card

### *Setting the Message Centre Number*

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Messages”
- 2   and  to point to “Parameters”
- 3   and  to point to “Message Centre”
- 4  
- 5   and hold until a “+” appears
- 6  country code or  to scroll through the abbreviated international names – see “International Dialling” page 9
- 7  message centre number (including area code)
- 8  














**NOTE:** If you do not include the international access code, you will not be able to send or receive Short Text Messages.




## Sending a Short Text Message








You have the option to either create your own message or use a pre-defined message.

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Messages”
- 2   and  to point to “Create”
- 3   and  to select “<Create>” or a pre-defined message
- 4   enter the message (up to 160 characters) – see “Alpha Entry” page 32.
- 5  












You will be asked if you wish to send the message, if you do not wish to send the message press , the message will be stored.



- 6  , enter the destination phone number (or recall a number from the Phonebook) - see “Retrieving a Number” page 23
- 7   twice
- 8 You maybe asked if you wish to have delivery confirmation, if you want confirmation press .
- 9 If you do not, use  to indicate “No”, then press 

## Using Pre-Defined Messages










When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Messages”
- 2   and  to point to “Create”
- 3   and  to point to the pre-defined message you wish to use
- 4   twice to send the message


## Short Text Messages

### ***Changing the Pre-Defined Message Language***

With the pre-defined message highlighted:

- 1 Use  to select "Lang"
- 2   and  to select a language
- 3   and  to point to "Select"
- 4   twice to send the message















### **Receiving Short Text Messages**

When a Short Text Message is sent to your phone the message indicator () will flash in the display, with an audible tone or vibration alert. This indicates that a new message has been received.



If the message indicator appears constantly in the display this indicates that the message area is full and you will need to delete old messages in order to be able to receive new messages in the future.

When "Menu" is displayed in the option area of the display:

- 1   and  to point to "Messages"
- 2   and  to point to "Receive List"
- 3   and  to scroll to the message
- 4   to read the message
- 5 To delete the message use  to select "Delete"
- 6   twice

### **Reading a Short Text Message**



To read the message press  when "Read" is displayed in the option area.

















## Cell Broadcasts

Cell broadcasts are general information that is sent to your phone by a network operator. The information can be district traffic or weather.

### **Selecting Broadcast Topics**












You need to specify the topic(s) of information that you wish to receive as broadcasts before you can receive them.

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Messages”
- 2   and  to point to “Broadcasts”
- 3   and  to point to “Topics”
- 4  
- 5   and  to select a Topic
- 6   twice to insert the Topic into your broadcast list

### **Enabling/Disabling Broadcasts**

When “Menu” is displayed in the option area of the display:

- 1   and  to point to “Messages”
- 2   and  to point to “Broadcasts”
- 3   and  to point to “Receive”
- 4  

Once broadcasts have been enabled, the same procedure will disable broadcasts.


# Alpha Entry

Alpha Entry is used to enter alphanumeric characters into Phonebook, Short Text Messages, Price Per Unit and the Greeting Message.




Key	Character entry type		
	Normal (ABC)	Greek (ABΓ)	Extended (AÄÅ)
<b>1</b>	Space"@,.;!;?¿()[]'&%+~/^~ <>=_£\$¥¤§		
<b>2</b> ABC	ABCabc		AÄÅÆEBCÇaäåæàbc
<b>3</b> DEF	DEFdef		DEÉFdeéèf
<b>4</b> GHI	GHIghi		GHIghii
<b>5</b> JKL	JKLjkl		JKLjkl
<b>6</b> MNO	MNOmno		MNÑOÖØmnñooøò
<b>7</b> PQRS	PQRSpqrs		PQRSpqrsß
<b>8</b> TUV	TUVtuv		TUÜVtuüùv
<b>9</b> WXYZ	WXYZwxyz		WXYZwxyz

Each time a key is pressed in quick succession it will display the next character available on that key (or if the key is pressed and held down it will cycle through the available characters).




Releasing the key, or pressing another key will enter the currently displayed character and the cursor will move to the next position.

To access the different character types, normal (ABC), numerals (0–9), Greek characters (ABΓ) and extended characters (AÄÅ) press .


## Editing Alpha Entry

Pressing  will move you up or down one line. Pressing  will move you left or right one character. When the cursor is moved over a character and another key pressed this will insert the new character. Pressing  will delete the character to the left of the cursor or delete the current line when pressed and held.

# Menu Structures

When the word “Menu” is in the option area of the display pressing the  will display a menu of phone features. To select a feature press  so that the pointer is showing next to the feature that you require then press .

A quick way of selecting a feature is to press the menu number shown in the bottom left of the display.

To leave the menu press  repeatedly.

During a call a restricted menu will be available.

**NOTE:** Any feature that does not appear with it's corresponding menu structure has already been detailed earlier in this manual.

## Key Guard

For instructions on “Key Guard” – see page 12.

## Phonebook




Most common use of the Phonebook is covered in “Phonebook Basics” – see page 22.

*Review* shows how many locations are available in the Phonebook. Occupied locations are shown with “■”.

*My Numbers* is a convenient part of Phonebook where your voice, fax and data phone number(s) can be stored and viewed.

The source for the Hot Key phone numbers can be set using the *Hot Key Dial* menu.

# Messages

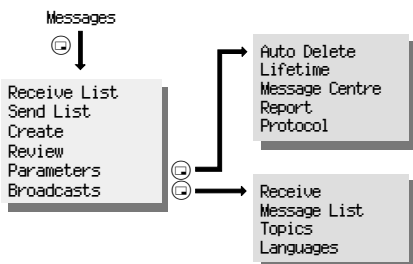

Most common use of the Messages is covered in “Short Text Messages” – see page 28

Received messages will be stored in the *Receive List*. Flashing “•” will indicate unread messages. Once the message is selected, you can read, delete, edit and reply. With the word “Sender:” displayed or a phone number in quotation marks (“ ”), pressing dials the phone number or pressing stores the phone number in the Phonebook.

When a message has been sent or edited it will be stored in the *Send List*. *Review* allows you to check usage of the message area.

## Parameters

The *Parameters* are necessary for receiving or sending message.

*Auto Delete* will erase messages automatically. When “Received Read” is selected, a new message will overwrite the oldest read message. When “Received Any” is selected, a new message will overwrite the oldest message even though it may not have been read.

*Lifetime* is the duration that your message is stored at the Message Centre. Delivery attempts will be repeated until the message has been delivered or the Lifetime expires.

When your message has been delivered a confirmation can be received if *Report* is set to “Yes”.


The *Message Centre* may be able to convert the message to the format specified by *Protocol*.

## Broadcasts

The *Message List* will display the last received broadcast messages.


The *Language* in which broadcast messages are displayed can be changed.

## Applications

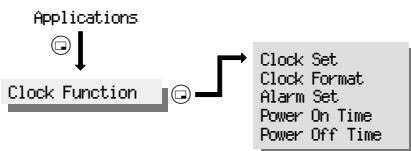

For instructions on “Phone Clock” - see page 13.

## Personalise

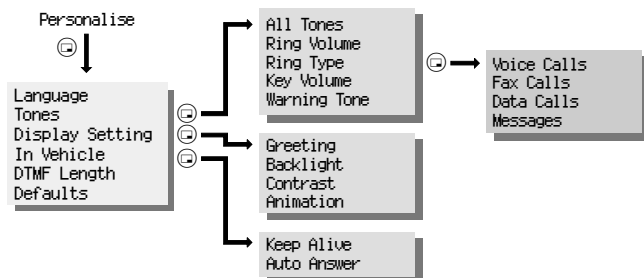

The *Language* that the phone will use for display messages can be changed.

In *Tones*, the phone key, ring and warning tones (except low battery warning), can be switched off. When *All Tones* are switched off the silent indicator (🔇) is displayed.

A different *Ring Type* can be used for voice, fax, data and messages. There is a selection of 6 tones and 14 melodies.

*Display Setting* allows the colour and the contrast of the display to be changed.

A personalised *Greeting* can be programmed for when the phone is switched on – see “Alpha Entry” page 32.

## Menu Structures

*Animation* allows the animated themes to be changed or disabled.


When the phone is mounted in the optional Car Mount Kit and the vehicle ignition is turned off the *In Vehicle - Keep Alive* timer will start, delaying the switching off of the phone. If the ignition is turned off during a call, the call will be maintained; when the call ends the timer will continue, or the phone will be switched off if the timer has expired. If the delay timer expires during a call, the call will still be maintained. If the phone is removed from the Car Mount Kit during the specified delay time, the timer will be canceled and the phone will not be turned off.

When *Auto Answer* is switched on, and the phone is mounted in the optional Car Mount Kit or Personal Handsfree Adaptor, a call will be answered without pressing any keys.

The duration of DTMF tones that are played during pause dial can be changed from short and long in *DTMF Length*.

*Defaults* will return your Personal Settings to their factory default, except the Phone Lock code and language.

## Call Service

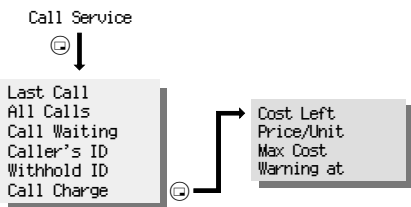

*Last Call* will display the duration and call charge, if available, of the last call during standby or the current call during a call.

Times are indicated as: hours (0-99), minutes (0-59), seconds (0-59) - HH:MM:SS.

*All Calls* displays the accumulated duration and call charge, if available, of incoming and outgoing calls. The lock code or PIN2 is required to reset the timer and call charge.

*Call Waiting* allows you to receive a second call during your current call. When updating or checking the status of call waiting the phone must be registered with a network.



*Caller's ID* allows you to check the status of Caller's Identification. The phone must be registered with a network.


Using *Withhold ID* it is possible to check if you send Caller's Identification information when you make a call. When checking the Status of Withhold ID the phone must be registered with a network.

*Call Charge* will set the cost of each unit for call charge information and the required currency in which call charge is displayed.

Using *Max Cost* can restrict use of the phone to a specified number of units.

**NOTE:** The duration of one unit may vary during the day, peak and off-peak times. Therefore, the call charge can be calculated accordingly. However, call charge information may not give an accurate reflection of the tariffs charged by your Service Provider.

## Call Divert

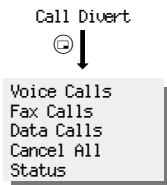


When *Call Divert* is enabled the divert icon (↪) is displayed.

You can divert voice, fax and data calls using different circumstances and to different phone numbers.

When updating or checking the *Status* of Call Divert the phone must be registered with a network.

# Security

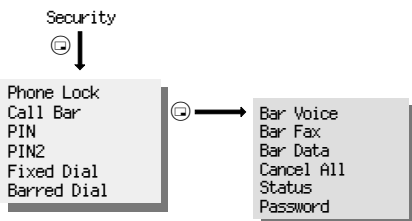

Most common uses of Security are detailed in “Phone Security” - see page 16

*Call Bar* is used to restrict certain outgoing and/or incoming calls. Call Bar is controlled by a security *Password* that is supplied by your *Service Provider*. When updating or checking the *Status* of Call Bar the phone must be registered with a network. Different Call Bar restrictions can be used for voice, fax and data calls. Any combination of call restrictions can be set.

With *Fixed Dial* switched on you can only make calls with the phone numbers stored in Fixed Dial area of the Phonebook – see “Fixed Dial” page 26. Emergency calls can be made at any time. To use this function PIN2 is required.

*Barred Dial* enables you to bar all phone numbers from being dialled on the phone. To use this function PIN2 is required.

## Network



When not in your home country you may use a network that you do not directly subscribe to, this is called ROAMING. National Law may not permit roaming in your home country.

*New Network* is used to manually select a network that is available in your current location.

When the *Search Mode* is set to “Automatic” the phone will automatically reselect a new network in order to maintain optimum network availability. While the Search Mode is set to “Manual” the phone will only use a selected network. If coverage is lost another network should be selected.

The *Network List* is used when the Search Mode has been set to “Automatic”. The location numbers in the Preferred Network List show the search priority.

Selecting “Insert” stores a new network in the currently displayed location and then moves other networks down, “Edit” overwrites the old network with a new one, and “Add” stores a new network at the end of the list.

## Care and Maintenance



Pressing any of the keys may produce a loud tone. Avoid holding the phone close to the ear while pressing the keys.



Extreme temperatures may have a temporary effect on the operation of your phone. This is normal and does not indicate a fault.



Do not disassemble the equipment. There are no user-serviceable parts.



Do not subject the equipment to excessive vibration or shock.



Avoid contact with liquids. If the equipment becomes wet immediately remove the power and contact your dealer.



Do not leave the equipment in direct sunlight or a humid, dusty or hot area.



Keep metallic items that may accidentally touch the terminals away from the equipment.



Always charge the Battery Pack in a well ventilated area, not in direct sunlight, between +5°C and +35°C. It is not possible to recharge the battery pack if it is outside this temperature range.



Avoid recharging battery packs for longer than recommended.



Do not incinerate or dispose of the battery packs as ordinary rubbish. The battery packs must be disposed of in accordance with local legislation and may be recycled.



When disposing of any packing materials or old equipment check with your local authorities for information on recycling.

# Glossary of Terms

DTMF Tones	Dual Tone Multi-Frequency tones allow you to communicate with computerized phone systems, voice mailboxes etc.
GSM	Global System for Mobile Communications. The name given to the advanced digital technology that your phone uses.
Home country	The country where your home network operates.
Home network	The GSM network on which your subscription details are held.
Network Operator	The organization responsible for operating a GSM network.
Password	Used for the control of the Call Bar. Supplied by your Service Provider.
PIN	Personal Identification Number used for SIM security. Supplied by your Service Provider. If the PIN is entered incorrectly 3 times, the PIN will be blocked.
PIN2	Personal Identification Number used for the control of Fixed Dial Store and Call Charge metering. Supplied by your Service Provider. If the PIN2 is entered incorrectly 3 times, the PIN2 will be blocked.
PUK/ PUK2	PIN/PIN2 Unblocking Key. Used to unblock the PIN/PIN2. Supplied by your Service Provider. If the PUK/PUK2 is entered incorrectly 10 times, the PUK/PUK2 will be blocked.

## Glossary of Terms

Registration	The act of locking on to a GSM network. This is usually performed automatically by your phone.
Roaming	The ability to use your phone on networks other than your Home network.
Service Provider	The organization responsible for providing access to the GSM network.
SIM	Subscriber Identity Module. A small smart-card which stores unique subscriber and user-entered information such as Phonebook and Short Messages. Supplied by your Service Provider.

# Trouble Shooting


Should any problem persist contact your dealer.

Problem	Cause	Remedy
Telephone will not switch on.		Check that the Battery Pack is fully charged and correctly connected to the phone.
Extremely short battery life for a new battery pack.	The network you are using and the condition of the battery pack can affect battery life.	
Short battery life for an old battery pack.	The battery pack was worn out.	Replace with a new one.
Short battery life for Ni-MH battery pack.	The life of the battery pack is affected by improper charging, this is inherent in all Ni-MH batteries.	<p>To maintain maximum performance always use until the Low Battery Warning and then fully recharge the battery pack.</p> <p>To revive the Battery Pack use the phone until the Low Battery Warning and then fully recharge, repeat this process at least three times. However, if the battery life is still short, the Battery Pack has eventually worn out. Replace with a new one.</p>

## Trouble Shooting

The phone cannot be switched on when charging	When the Battery Pack has been deeply discharged the phone will take a short time to detect which type of Battery Pack it is charging	Leave the phone charging the Battery Pack for a few minutes before attempting to switch it on.
Calls cannot be made.	The phone is locked.	Unlock the phone (Menu: Security: Phone Lock)
	Outgoing calls are barred.	Disable the outgoing call barring, or barred dial (Menu: Security: Call Bar/Barred Dial)
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.
Calls cannot be made from Fixed Dial Store		<p>Check your SIM supports Fixed Dial.</p> <p>Check if the Fixed Dial is switched on (Menu: Security: Fixed Dial).</p> <p>Check the phone number is stored in the Fixed Dial.</p>
Calls cannot be received.	The phone is not switched on.	Switch the phone on.
	Incoming calls are barred.	Disable the incoming call barring (Menu: Security: Call Bar)
	The phone is not registered to a network.	Move to a coverage area and operate your phone after it has registered with a network.



Emergency calls cannot be made.	You are not in a GSM coverage area.	Check that the antenna symbol  is displayed. Move to a coverage area and operate your phone when the antenna symbol is displayed.
Telephone numbers cannot be recalled.	The phone is locked.	Unlock the phone (Menu: Security: Phone Lock)
	Fixed Dial is switched on.	Switch off Fixed Dial (Menu: Security: Fixed Dial)

# Important Error Messages

Area not Allowed	Roaming in the selected area is not allowed.
Network not Allowed	Roaming with the selected network is not allowed.
Security Failure	The network has detected authentication failure because your SIM is not registered with that network. Contact your Service Provider.
SIM Blocked	The SIM is blocked because the wrong PUK has been entered ten times. Contact your Service Provider.
SIM Error	The phone has detected a problem with the SIM. Switch the phone off and then back on. If the message does not disappear contact your Service Provider.
Message Rejected Store Full	A message has been received but the message store is full. To receive messages, delete some of the currently stored messages or set messages to automatically clear (Menu: Messages: Parameters: Auto Delete)
PIN2 Invalidated	The PIN2 is blocked permanently because the wrong PUK2 has been entered 10 times. Services controlled by PIN2 cannot be used. Contact your Service Provider.
Warning Store Full Continue?	The message area is full. Your messages cannot be stored until some of the currently stored messages are deleted.
Auto Redial List Full	Redial list of unsuccessfully dialled numbers is full. Switch the phone off and then on again.

# Specifications

## Telephone

Type	GSM900 Class 4 GSM1800 Class 1
Temperature range	
Charging	+5°C to +35°C
Storage	-20°C to +60°C

## Battery – Attached to phone

	Battery Pack (S)	Battery Pack (L)
Weight	130g	170g
Dimensions Height x Width x Depth	135 x 45 x 20.5mm	135 x 45 x 30mm
Supply Voltage	3.6V DC, 670mAh Ni-MH	3.6V DC, 1340mAh Ni-MH
Standby time (h)	Up to 95	Up to 190
Talk Time (h)	3	6
Charge Time (min)	100	150

**NOTE:** Charge time will be longer when the phone is turned on. Battery life is affected by the network you are using and the condition of the battery pack.

# Notes





The Serial Number can be found on the outside of the phone under the battery. For your convenience we recommend that you note the following details as a record of your purchase.

Part Number	
Serial Number	
Dealer Name	
Purchase Date	


#### BULL CP8 PATENT

© Matsushita Communication Industrial UK Limited 1999

Information in this document is subject to change without notice. No part of these instructions may be reproduced or transmitted in any form or by any means without obtaining express permission from Matsushita Communication Industrial UK Limited



GD330

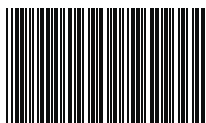

7LB270A

Printed in China

990909