



# Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 100 numbers and names in the phone memory. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called the phonebook.

## Storing a Phone Number with a Name

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the phonebook.

1. Key in the number to be stored.
2. When you are sure that it is correct, press the **Save** soft key.

**Notes:**

- If you make a mistake while entering a number, correct it using the C key. For further details, refer to page 26.
  - To insert a dialling pause for special phone services, such as banking by phone, hold down the # key. 'P' is displayed to indicate the pause.
3. Enter the corresponding name (the maximum length depends on your SIM card). For information on how to enter a name, see opposite.
  4. When you are satisfied, press the **OK** soft key. The phone now displays the first free location in the SIM card for you to save the number and name. If the card memory is full, the first free location in the phone memory is displayed.

5. Press the right soft key to toggle between the phone (**To Phone**) and card (**To Card**) memories.
6. If you do not want to save the number and name in the suggested location, press **C** to clear the location number and enter your preferred location by pressing the number keys.
7. Press **OK** to store the name and number.

## Entering a Name

1. Press the key labelled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on

List of characters available:

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & j i \$	Space % 1 @ _ £ \$ ¥ ¨
2	A B C 2 Å Ä Æ Ç Æ	a b c 2 à á â æ
3	D E F 3 É Δ Φ	d e f 3 è é
4	G H I 4 Θ Ψ	g h i 4 ì
5	J K L 5 Λ	j k l 5
6	M N O 6 Ñ Ø Ò	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 ß
8	T U V 8 Û	t u v 8 ü ù
9	W X Y Z 9 Ω	w x y z 9
0	0 , : ; ' " / =	0 - + ( ) * # < >

Phonebook

- 2. To switch between upper case and lower case characters, press the **Case** soft key. All subsequent letters will appear in the selected case until the **Case** soft key is pressed again.

- 3. Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice (or a different letter on the same key), just wait for a few seconds for the cursor to move right automatically, and then select the next letter. You can also move the cursor by using the \* (^) and # (α) keys. To delete letters, press the **C** key.


Searching for and Dialling a Number in the Phonebook

- 1. When the idle screen is displayed, press the **PhoneBook** soft key. You are asked to enter a name.
- 2. Enter the start of the name that you want to find and press the **Search** soft key.

**Note:** You can also scroll through the phonebook from the beginning, by pressing the **Search** soft key directly.

The phonebook entries are listed, starting with the first entry matching your input. This entry is also highlighted.

Phonebook

- |  |  |
|--|--|
| 3. To...   | Then press the...  |
| View the highlighted entry                       | <b>View</b> soft key.  |
| Select a different entry                         | ↵ soft key (or the or „ keys on the left side of the phone) one or more times until the required entry is highlighted. |
| Look for a name starting with a different letter | Key labelled with the required letter.   |
- 4. Once you have found the required entry, press  to dial the number.

Phonebook Options

When storing or viewing a number in the phonebook, **Options** appears above the left soft key to allow you to access the phonebook options, described in the following paragraphs.

Accessing the Options

- To access the various phonebook options, proceed as follows.
- 1. Press the **Options** soft key.  
The first available option is highlighted.



Phonebook

2. To...

Select the highlighted option

Highlight a different option

Then press the...

**Select** soft key.

**↵** soft key (or the **OK** or **✓** keys on the left side of the phone) one or more times until the required option is highlighted.

Voice Record

This option allows you to record the name vocally for subsequent voice dialling.

Follow the instructions given by your phone to record the required name.

**Note:** This option appears only when no name has been recorded.

Play Voice

This option plays back the names that you have recorded.

**Note:** This option appears only when you have already recorded some names.

Phonebook

Voice Delete

This option allows you to delete a specific voice entry.

**Note:** This option appears only when you have already recorded some names.

You are asked to confirm the deletion by pressing the **OK** soft key.

Paste

This option allows you to paste the phonebook number into the normal dialling mode. Use this option to dial a number similar to one in the phonebook (a different extension in the same office for example).

Use the **C** key to change the number as required (refer to page 26 for further details). When you are ready to dial, press **☎**.

Edit

This option allows you to edit a number and name stored in the phonebook.

Erase

This option allows you to erase a number and name stored in the phonebook.

You are asked to confirm that you wish to erase the name and number from the phonebook by pressing the **Yes** soft key.



Phonebook

Copy

This option allows you to copy a phonebook number to another location. Use this option to store a number similar to one already in memory; once copied, edit the number and store it in the phonebook.

Voice Dialling

You can access the **Voice** menu options described in the following paragraphs, by pressing the **Phonebook** soft key, followed by the **Voice** soft key.

Accessing the Options

To access the various voice dial options, proceed as follows.

To...	Then press the...
Select the highlighted option	<b>Select</b> soft key.
Highlight a different option	↵ soft key (or the or „ keys on the left side of the phone) one or more times until the required option is highlighted.

Phonebook

Record

This option allows you to register numbers for subsequent voice dialling. Record the required name, by following the instructions given by your phone to enter the required telephone number and name.

Voice Dial

This option allows you to initiate a voice dial. Pronounce the required name as clearly as possible. You are asked to repeat the name a second time and then the associated number is dialled.

Delete One

This option allows you to select a voice dial entry and delete the information recorded. The phone number remains in the phonebook but the voice recording is deleted.

If the name displayed is...	Then press the...
To be deleted	<b>OK</b> soft key.
<u>Not</u> to be deleted	↵ soft key. The next name is displayed.


To exit the **Delete One** option, press the **C** key.

**Phonebook****Play All**

This option allows you to play back all recorded names.

**Delete All**

This option allows you to delete all voice dial information stored. The phone numbers remain in the phonebook but the voice recordings are deleted. Press the **OK** soft key when the following message is displayed:

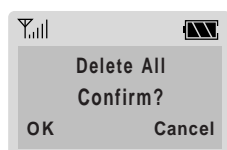

Otherwise, press the **Cancel** soft key to exit the function without deleting the voice dial entries.