

Phone Settings

Many different features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone Settings** menu.

Greeting Message Menu 6-1

 
This option allows you to set a greeting message to be displayed briefly when the phone is switched on. The current message is displayed.

To...	Then press the...
Clear the existing message	C key and hold it down until the message is cleared.
Enter a new message	Appropriate alphanumeric keys.
Change from upper case to lower case characters and vice versa	Case soft key.

For more information on entering characters, refer to page 37.

Own Number Menu 6-2

This menu displays your phone number and allows you to edit it.



Phone Settings

To...	Then press the...
Enter the international prefix (+)	0 key and hold it down until the + is displayed.
Correct a digit	C key.
Clear the whole number	C key and hold it down until the number is cleared.
Move the cursor left without clearing the digits	← soft key.
Move the cursor right	→ key on the left of the phone.

 
Language Menu 6-3

You can select a different setting for the text language (option **6-3-1**) and voice language(option **6-3-2**). When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

Any-key Answer Menu 6-4


Depending on the setting of the **Any-key Answer** option, you can answer an incoming call by pressing any key except **⏏** and the **Reject** soft key. To reject the call, press **⏏** or the **Reject** soft key. If this option is set to **OFF**, use **⏏** or **⏏** on the left side of the phone to reject the call.






Phone Settings

The following options are available.

ON: you can press any key except  and **Reject**.

OFF: you can only press the  or **Accept** keys.

Backlight

Menu 6-5

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off. The following options are available.

Short: the backlight comes on when you press a key or receive a call and switches off 10 seconds after the last key is pressed.

Long: the backlight comes on when you press a key or receive a call and switches off 20 seconds after the last key is pressed.

OFF: the backlight is not used.

Service Light

Menu 6-6

This option allows you to select whether or not the service light on the top of the phone is used. The following options are available.

ON: the service light flashes when the phone is ready for use.

OFF: the service light is not used.

76

Phone Settings

Auto Redial

Menu 6-7

With the Auto Redial function, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

Note: The interval between two call attempts varies.

The following options are available.

ON: the number is redialled automatically.

OFF: the number is not redialled.

Auto Answer

Menu 6-8

With the Auto Answer function, the phone automatically answers calls after 3, 5 or 10 seconds. You can also turn this feature off.

Note: This feature is only available when the phone is connected to a car kit (optional).

Caller ID

Menu 6-9

 
You can prevent your phone number from being displayed on the phone of the person being called.

Note: Some networks do not allow the user to change this setting.

The following options are available.

Default: the default setting provided by the network is used.

77



Phone Settings

Hide Number: your number is not displayed on the other person's phone.

Send Number: your number is sent each time you make a call.

Active Flip*Menu 6-0*

The voice dial mode can be activated automatically whenever the flip cover is opened.

The following options are available.

ON: the voice dial mode is activated when you open the flip cover.

OFF: the voice dial mode must be activated manually via the phonebook; for further information, refer to page 42.

Reset Settings*Menu 6-**

You can easily reset your phone to its default configuration. To do so, proceed as follows.

1. Select the **Reset Settings** option.
2. Enter the 4-digit phone password.

Note: The password is preset to 0000. To change this password, refer to page 84.